


OWNER'S MANUAL

Outdoor LP Gas Camp stove

Model No. GCT803W

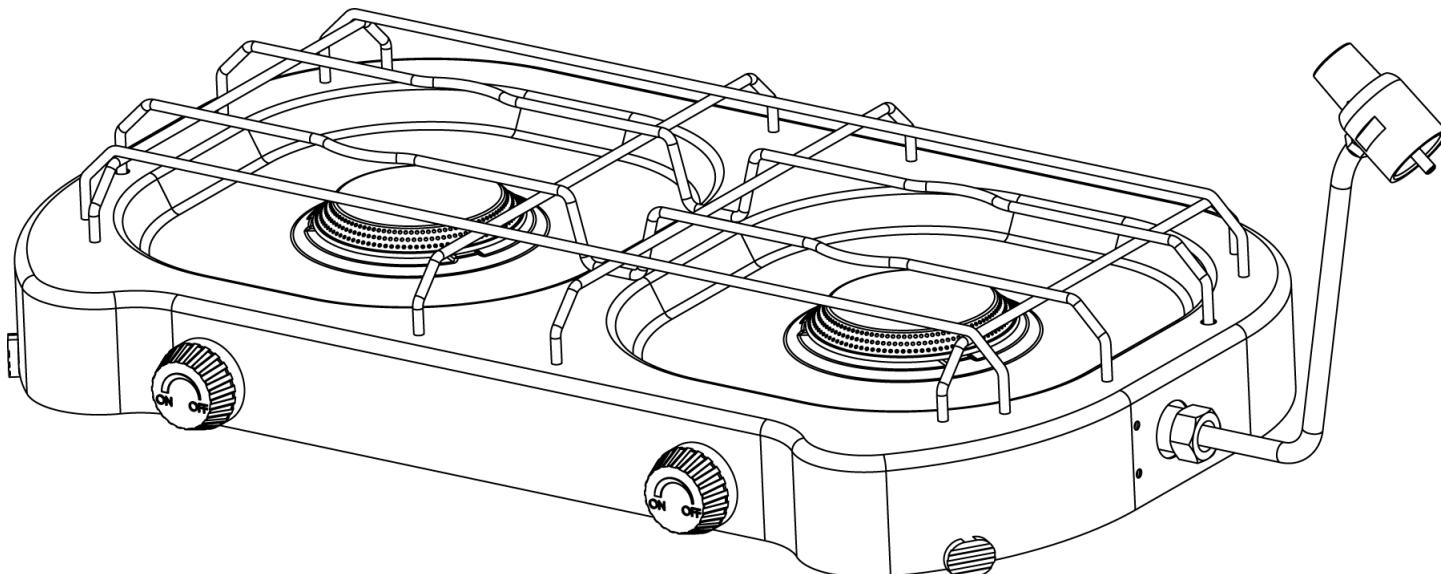

DANGER 	CARBON MONOXIDE HAZARD <ul style="list-style-type: none">This appliance can produce carbon monoxide which has no odor.Using it in an enclosed space can kill you.Never use this appliance in an enclosed space such as a camper, tent, car or home.
-------------------	--

WARNING FOR YOUR SAFETY: For Outdoor Use Only (outside any enclosure)

WARNING FOR YOUR SAFETY: <ol style="list-style-type: none">Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

Save these instructions for future reference.
If you are assembling this unit for someone else,
give this manual to him or her to read and save
for future reference.

Table of Contents

Important Safeguards	Page 2
Exploded View & Hardware	3
Assembly Instructions	4
Operating Instructions	5
Connecting Gas Tank	5
Checking for Leaks	5
Lighting	5
Turning Off	5
First Use	5
Cooking	5
Cleaning and Care	5
Product Registration	6
Limited Warranty	6
Troubleshooting	7

The use and installation of this product must conform to local codes. In absence of local codes, use the *National Fuel Gas Code, ANSI Z223.1/NFPA 54, CAN/CGA-B149.1, Natural Gas and Propane Installation Code*.

California Proposition 65: Chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm are created by the combustion of propane.

Manufactured in China for:
Blue Rhino Global Sourcing, Inc
Winston-Salem, NC USA
1.800.762.1142, www.bluerhino.com

© 2008 Blue Rhino Global Sourcing, Inc. All Rights Reserved

GCT803W-OM-103 ES



**DANGER**

If you smell gas -

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

▲ DANGER: Failure to follow the dangers, warning and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

▲ WARNING:

- ▲ This camp stove is for outdoor use only, and shall not be used in a building, garage, or any other enclosed area.
- ▲ Do NOT operate, light or use this appliance within 8 feet of walls, structures or buildings.
- ▲ This camp stove is NOT for commercial use.
- ▲ This camp stove is for use with liquid propane (LP) gas only. The conversion to or attempted use of natural gas in this LP gas camp stove is dangerous and will void your warranty.
- ▲ LP gas Characteristics:
 - a. LP gas is flammable and hazardous if handled improperly. Become aware of the characteristics before using any LP gas product.
 - b. LP gas is explosive under pressure, heavier than air, and settles and pools in low areas.
 - c. LP gas in its natural state has no odor. For your safety, an odorant is added that smells like rotten cabbage.
 - d. Contact with LP gas can cause freeze burns to skin.
- ▲ Do not store spare LP cylinder within 10 feet (3.05 m) of this appliance.
- ▲ An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
- ▲ LP gas tank needed to operate. Only tanks marked "propane" may be used.
- ▲ The LP gas tank used with the camp stove must be constructed and marked in accordance with the Specifications for LP-gas cylinders of the U.S. Department of Transportation (DOT) or *Transport Canada, CAN/CSA 339*.
- ▲ LP gas tank must be arranged for vapor withdrawal.
- ▲ Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.
- ▲ The LP gas tank should not be dropped or handled roughly.
- ▲ LP gas tanks must be stored outdoors out of the reach of children and must not be stored in a building, garage, or any other enclosed area. Your tank must never be stored where temperatures can reach over 125°F.
- ▲ Never attempt to attach this camp stove to the self-contained LP gas system of a camper trailer, motor home, or house.
- ▲ The use of alcohol, or prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- ▲ Never use charcoal, lighter fluid, lava rocks, gasoline, kerosene, or alcohol with this product.
- ▲ Your camp stove has been checked at all factory connections for leaks. Recheck all connections, as movement in shipping can loosen connections.
- ▲ Check for leaks even if your unit was assembled for you by someone else.
- ▲ Do not operate if gas leak is present. Gas leaks may cause a fire or explosion.
- ▲ You must follow all leak-checking procedures before operating. To prevent fire or explosion hazard when testing for a leak:
 - a. Always perform leak test before lighting the camp stove and each time the tank is connected for use.
 - b. No smoking. Do not use or permit sources of ignition in the area while conducting a leak test.
 - c. Conduct the leak test outdoors in a well-ventilated area.
 - d. Do not use matches, lighters, or a flame to check for leaks.
 - e. Do not use camp stove until any and all leaks are corrected.

If you are unable to stop a leak, disconnect the LP gas supply. Call a gas appliance serviceman or your local LP gas supplier.
- ▲ Do not use in an explosive atmosphere. Keep camp stove area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- ▲ Keep all combustible items and surfaces at least 21 inches (53 cm) away from the camp stove at all times. DO NOT use this camp stove or any gas product under any overhead or near any unprotected combustible constructions.

**WARNING****FOR YOUR SAFETY**

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

- ▲ It is essential to keep the camp stove's valve compartment, burners, and circulating air passages clean. Inspect camp stove before each use.
- ▲ Do not alter camp stove in any manner.
- ▲ Do not use the camp stove unless it is COMPLETELY assembled and all parts are securely fastened and tightened.
- ▲ This camp stove should be thoroughly cleaned and inspected on a regular basis.
- ▲ Use only the regulator provided. The replacement regulator shall be that specified by the manufacturer.
- ▲ Use only Blue Rhino Global Sourcing, Inc. factory authorized parts. The use of any part that is not factory authorized can be dangerous. This will also void your warranty.
- ▲ Do not use this appliance without reading "Operating Instructions" in this manual.
- ▲ Do not touch metal parts of camp stove until it has completely cooled (about 45 min.) to avoid burns, unless you are wearing protective gear (pot holders, gloves, BBQ mittens, etc.).
- ▲ Do not install or use in or on boats or recreational vehicles.
- ▲ When cooking, fire extinguishing materials shall be readily accessible. In the event of an oil grease fire, do not attempt to extinguish with water. Use type BC dry chemical fire extinguisher or smother with dirt, sand or baking soda.
- ▲ Do not use camp stove in high winds.
- ▲ Never lean over the camp stove when lighting.
- ▲ Do NOT use this camp stove if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part or control system and any gas control which has been under water.
- ▲ Do not leave a lit camp stove unattended, especially keep children and pets away from camp stove at all times.
- ▲ Do not attempt to move camp stove when in use. Allow the camp stove to cool before moving or storing.
- ▲ Storage of camp stove indoors is permissible only if the tank is disconnected, removed from the camp stove and properly stored outdoors.
- ▲ Do not attempt to disconnect the gas regulator from the tank or any gas fitting while the camp stove is in use.
- ▲ Disconnect cylinder when not in use.
- ▲ Always use your camp stove on a hard, non-combustable level surface. An asphalt or blacktop surface may not be acceptable for this purpose.
- ▲ Do not use directly on wooden decks and wooden picnic tables.
- ▲ Keep all electrical cords away from a hot camp stove.
- ▲ Do not use camp stove for indoor cooking or heating. TOXIC fumes can accumulate and cause asphyxiation.
- ▲ After a period of storage and/or nonuse, check for leaks, and burner obstructions.
- ▲ If camp stove is not in use, the tank must be disconnected and stored in a proper location.
- ▲ Always use a meat thermometer to ensure food is cooked to a safe temperature.
- ▲ Never cover entire cooking area with aluminum foil.
- ▲ Do not store a spare LP gas tank under or near this appliance.
- ▲ Please use protective gloves when assembling this product.
- ▲ Do not force parts together as this can result in personal injury or damage to the product.
- ▲ Deaths, serious injury or damage to property may occur if the above is not followed exactly.


Contact 1.800.762.1142 for assistance. Do not return to place of purchase.

Parts List

1	Cooking Grid	55-09-212
2	Regulator	55-09-214
3	Body Assembly	55-09-209
4	Control Knob (2)*	55-09-211
5	Foot (4)	55-09-213

* Pre-assembled

Exploded View

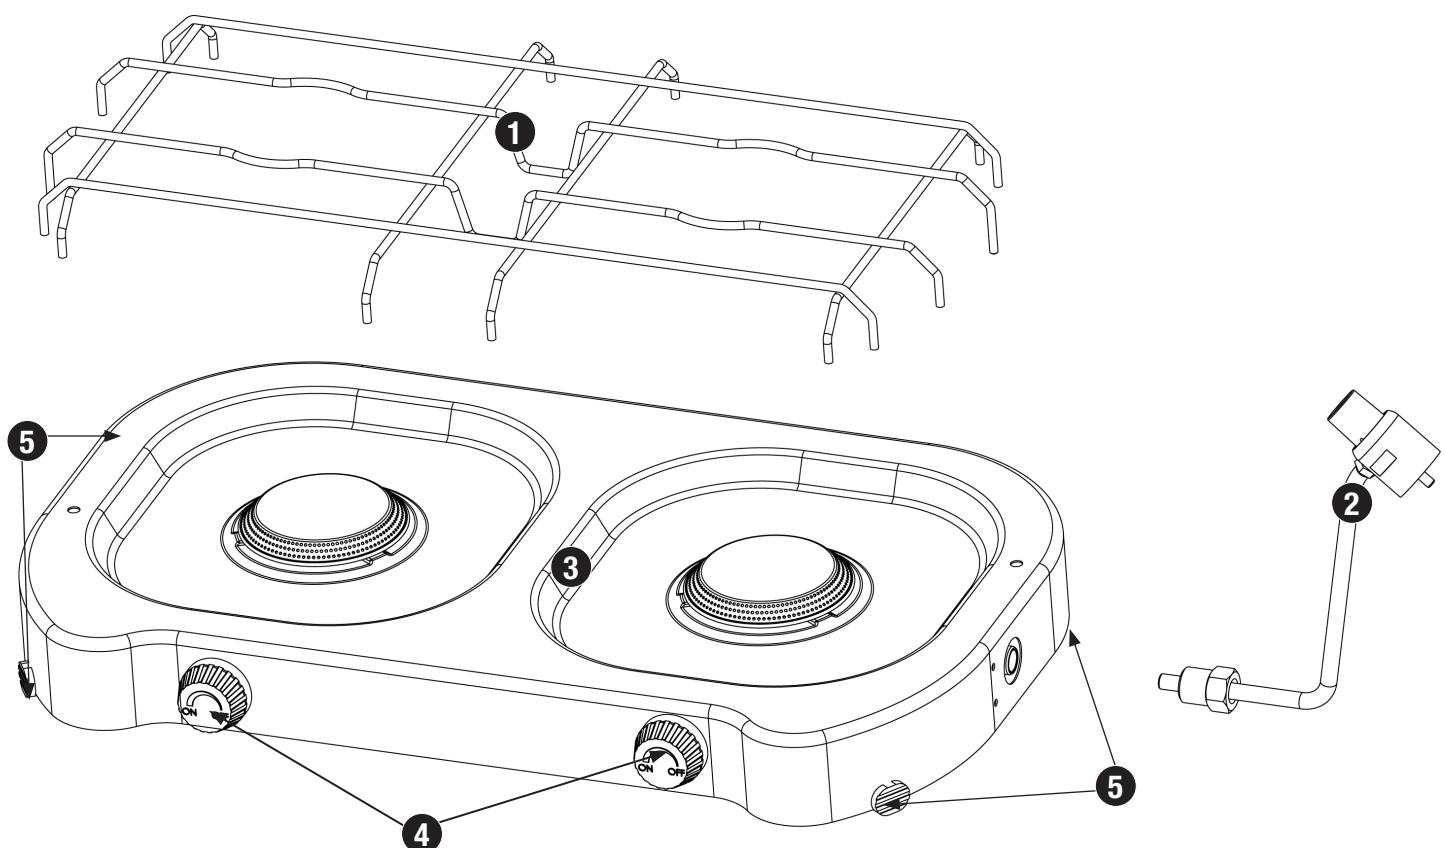

Hardware

A	Wing Nut	M5 Steel	2 pcs
---	----------	----------	-------

Assembly Instructions**1****DO NOT RETURN PRODUCT TO STORE.**

For assistance call **1.800.762.1142** toll free. Please have your owner's manual and serial number available for reference.

For Easiest Assembly:


- To avoid losing any small components or hardware, assemble your product on a hard level surface that does not have cracks or openings.
- Clear an area large enough to layout all components and hardware.
- When applicable, tighten all hardware connections by hand first. Once the step is completed go back and fully tighten all hardware.
- Follow all steps in order to properly assemble your product.

To complete assembly you will need:



- (1) Leak Detection Solution (Instructions on how to make solution are included in "Operating Instructions" section)
- (1) 14.1 oz LP gas tank.

Note: You must follow all steps to properly assemble grill.

Typical assembly: approximately 5 minutes.

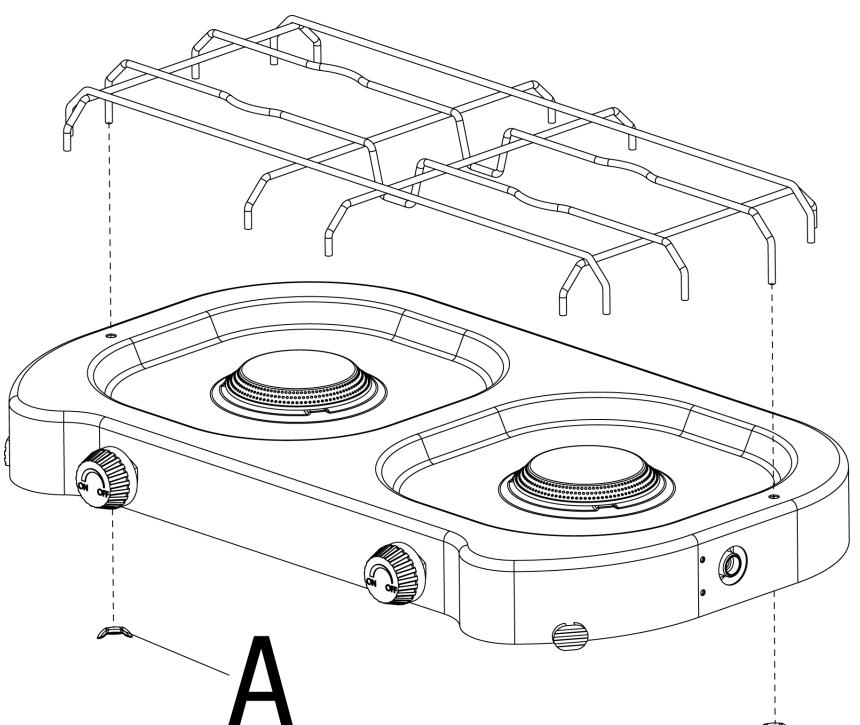2**Attach Cooking Grid**

A  x 2

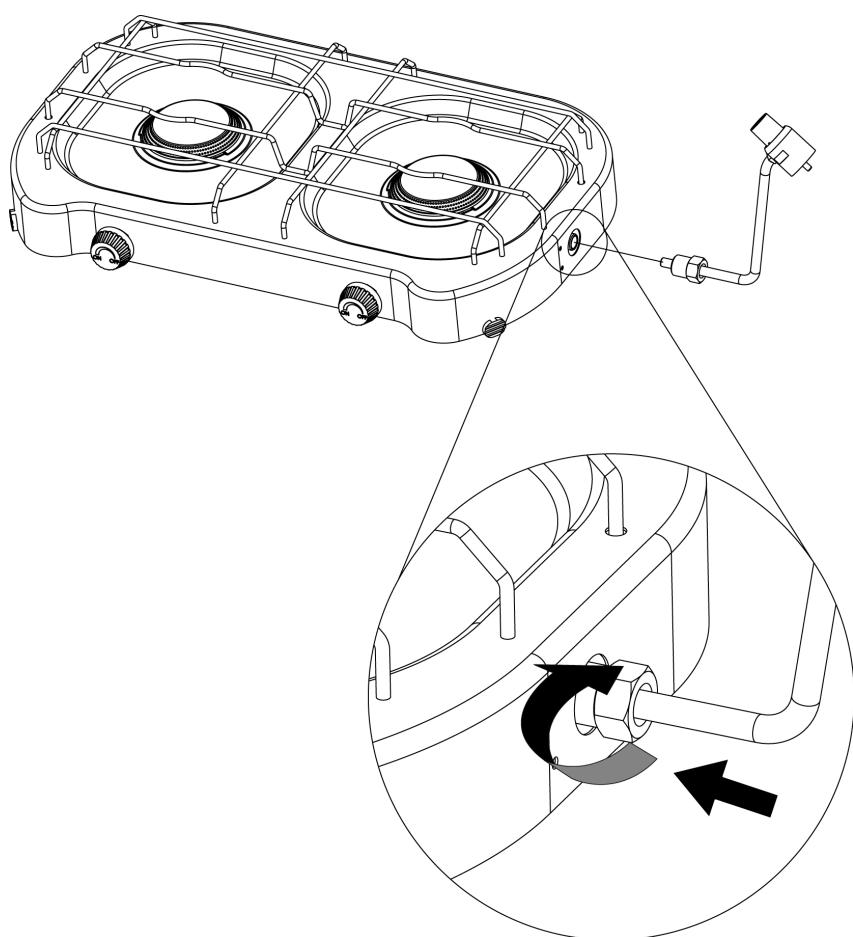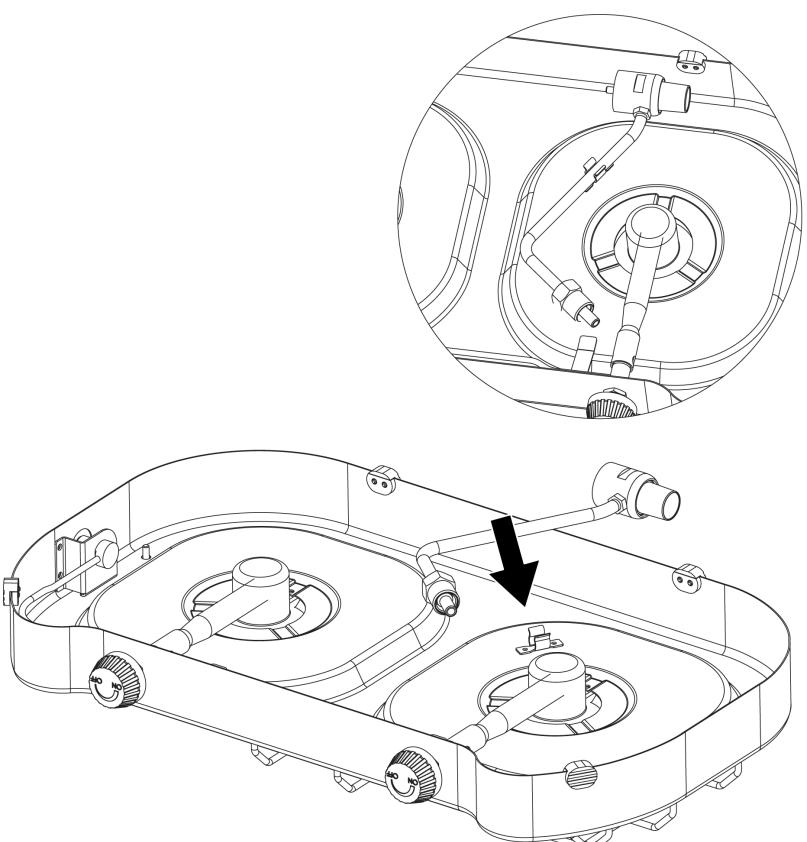3**Attach Regulator****Storage of Regulator When Not In Use**

Contact 1.800.762.1142 for assistance. Do not return to place of purchase.

Operating Instructions

This camp stove is designed to operate with a one pound 7-3/8" high disposable / 14.1 oz. propane gas tank (DOT 39 Cylinder).

**DO NOT ATTEMPT TO REFILL ANY ONE POUND
(14.1 oz.) PROPANE GAS TANKS!**

Connecting Gas Tank

1. Make sure the regulator/control valve is in the "OFF" position. (Figure 1)
2. Lubricate the threads of the regulator valve with petroleum jelly, insert the gas tank into the regulator valve and hand-tighten firmly. (Figure 2)
3. Test for leaks

Checking for Leaks

Burner Connection

1. Make sure the control valve is securely fastened to the burner. (Figure 3)
- If your unit was assembled for you, visually check the connection between the burner and control valve.

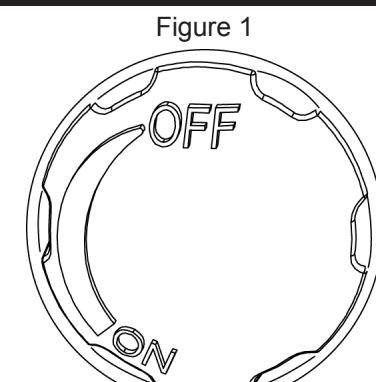


Figure 1

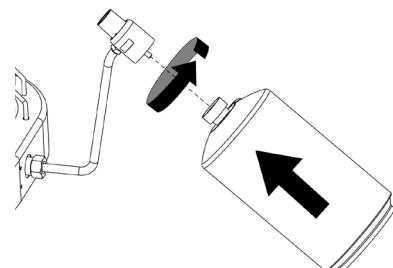


Figure 2

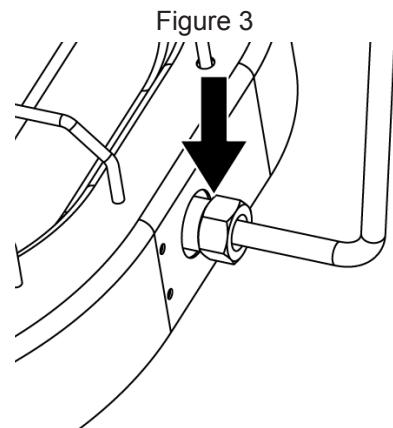


Figure 3

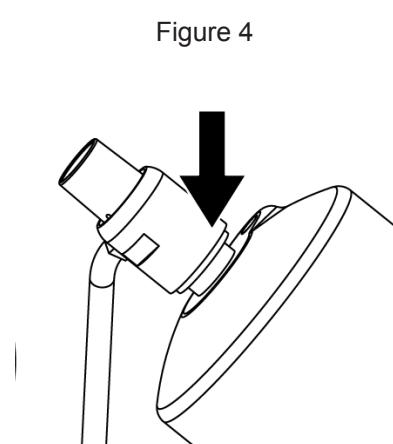


Figure 4

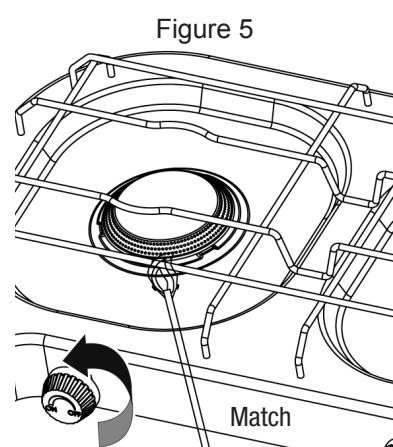


Figure 5

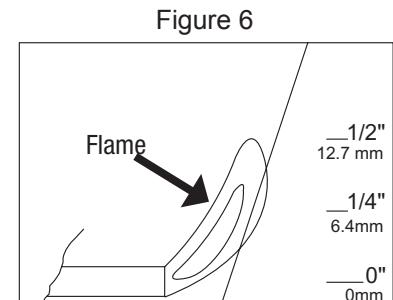


Figure 6

CAUTION: If burner flame goes out during operation, immediately turn the gas "OFF" and let the gas clear for about 5 minutes before re-lighting.

Turning Off

1. Turn control knobs to the "OFF" position.
2. Remove LP gas tank and properly store tank.

First Use

1. Make sure all labels, packaging and protective films have been removed from the camp stove.
2. Remove manufacturing oils before cooking on this camp stove for the first time, by operating the camp stove for at least 5 minutes on "ON". This will "heat clean" the internal parts and dissipate odors.

Cooking

1. Ignite burner(s) per lighting instructions.
2. Wear protective gloves to place pots and/or pans onto burner grid.
3. Wear protective gloves and use long handled tongs to place food into the pots and/or pans above the lit burner(s).
4. Adjust controls to desired temperature.
5. Cook until desired internal food temperatures are achieved.
6. Turn camp stove "OFF" by turning control knob to the "OFF" position. Remove LP gas tank and properly store tank.

Cleaning and Care

- CAUTION:** All cleaning and maintenance should be done when camp stove is cool and with the fuel supply disconnected.
- CAUTION:** DO NOT clean any camp stove part in a self cleaning oven. The extreme heat will damage the finish.
- CAUTION:** Keep camp stove clear and free from combustible materials, gasoline, and other flammable vapours and liquids.
- CAUTION:** Do NOT obstruct the flow of combustion and ventilation air.

Notices

1. Abrasive cleaners will damage this product.
2. Never use oven cleaner to clean any part of camp stove.
3. Do not clean any camp stove part in a self cleaning oven. The extreme heat will damage the finish.

Inspecting

This camp stove should be inspected on a regular basis to ensure product safety and longer product life.

WARNING: Do NOT attempt to clean this camp stove unless the flames are COMPLETELY out and unit is cool to the touch.

1. Check burner to make sure it is secure.
2. Check venturi to make sure it is clear and free of spider nests.
3. Check all gas connections for leaks.
4. Check components for any signs of damage or rust.
5. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning Surfaces

- WARNING:** Do NOT attempt to clean this camp stove unless the flames are COMPLETELY out and unit is cool to the touch.
- WARNING:** Do NOT use oven cleaner or abrasive cleaners as they will damage this product.
1. Wipe surfaces clean with mild dishwashing detergent or baking soda.
 2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
 3. Rinse clean with water.

Lighting

DO NOT expose the camp stove to flammable vapors or liquids during lighting.

1. Make sure all labels, packaging and protective films have been removed from the camp stove.
2. Make sure there are no obstructions of airflow to the gas unit. Spiders and insects can nest within and clog the burner / venturi tube at the orifice. **A clogged burner tube can lead to a fire beneath the appliance.**
3. Control knobs must be in the "OFF" position.
4. Wearing Heat resistant gloves, position the lit long match or lit long butane lighter near the side of the burner.
 - a. Turn control knob counterclockwise to "ON".
 - b. Remove long match/long butane lighter.
5. If ignition does not occur in 5 seconds, turn burner control knob "OFF", wait 5 minutes and repeat lighting procedure.
6. After lighting, observe the burner flame. Make sure all burner ports are lit and flame height matches illustration.
7. Repeat steps 3-6 for second burner.

Assembly Instructions

Cleaning Burner

1. Turn gas "OFF" at the control knob and remove LP gas tank.
2. Remove regulator.
3. Remove burner grids
4. Remove burner.
5. Clean inlet of burner with small bottle brush or compressed air.
6. Remove all food residue and dirt on burner surface.
7. Clean any clogged ports with a stiff wire (such as an opened paper clip)
8. Inspect burner for any damage (cracks or holes). If damage is found, replace with new burner.
9. Reinstall burner. Reconnect regulator.
10. Replace burner grid.
11. Preform leak test.

Product Registration

For faster warranty service, please register your product immediately at www.bluerhino.com or call 1.800.762.1142.

Limited Warranty

Blue Rhino Global Sourcing, Inc ("Vendor") warrants to the original retail purchaser of this product, and to no other person, that if this product is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such product shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase. Therefore, you should retain your sales slip or invoice. This Limited Warranty shall be limited to the repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor's Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves the claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to the original retail purchaser, freight or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the product as set out in this owner's manual. In addition, the Limited Warranty does not cover damage to the finish, such as scratches, dents, discoloration, rust or other weather damage, after purchase.

This Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from sellers other than authorized retailers or distributors, including the warranty of merchantability or the warranty of fitness for a particular purpose. VENDOR ALSO DISCLAIMS AND ANY ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. VENDOR SHALL NO LIABILITY TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor further disclaims any implied or express warranty of, and assumes no responsibility for, defects in workmanship caused by third parties.

This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to everyone.

Vendor does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment, and no such representations are binding on Vendor.

Blue Rhino Global Sourcing, Inc
Winston-Salem, North Carolina USA
(800) 762-1142

Contact 1.800.762.1142 for assistance. Do not return to place of purchase.

Troubleshooting

Problem	Possible Cause	Prevention/Cure
Burner will not light with match	No gas flow.	Check if LP gas tank is empty.
	Obstruction of gas flow.	Clear burner.
	Spider webs or insect nest in burner tube.	Clean burner tube.
	Burner ports clogged or blocked.	Clean burner ports.
Irregular flame pattern, flame does not run the full length of burner.	Burner ports are clogged or blocked.	Clean burner ports.
Flame is yellow or orange	New burner may have residual manufacturing oils.	Burn camp stove for 5 minutes.
	Spider webs or insect nest in burner tube.	Clean burner tube.
	Food residue, grease or seasoning salt on burner.	Clean burner.
Flame blow out	High or gusting winds.	Turn front of camp stove to face wind or increase flame height.
	Low on LP Gas.	Replace LP gas tank.
Flare-up	Grease buildup.	Clean camp stove.
Persistent grease fire.	Grease trapped by food buildup around burner system.	Turn knobs to "LOCK OFF POSITION." Let fire burn out. Leave lid in closed position and let fire burn out. After camp stove cools, remove and clean all parts.
Flashback (fire in burner tube(s))	Burner and/or burner tube is blocked.	Clean burner and/or burner tube.

Outdoor LP Gas Camp Stove Model No. GCT803W

**Gocimilla de camping a gas propano líquido para exteriores,
Modelo no. GCT803W**

Resolución de problemas

Problema	Causa posible	PrevenCIÓN/medida correctiva	Si necesita ayuda visite en www.bluerhino.com o llamarlos al 1.800.762.1142 para ayudarle inmediatamente.
Falta de uniformidad en la llama, la llama no cubre toda la longitud del quemador.	Bocas del quemador atascadas u obstruidas.	Limpie las bocas del quemador.	Para ayudar más detallada, visite en www.bluerhino.com o llamarlos al 1.800.762.1142 para ayudarle inmediatamente.
El quemador no se enciende con una cerilla.	Obstrucción del flujo de gas.	Limpie el quemador.	Centelleos (hay fuego en el (los) tubo(s) del quemador).
La llama es de color amarillo o naranja.	Haga funcionar la cocinilla durante 15 minutos con la tapa cerrada.	Puede que el nuevo quemador tenga aceites residuales del proceso de fabricación.	El quemador y/o el tubo del quemador.
La llama se apaga.	Vientos fuertes o rachados.	Gire el frenete de la cocinilla de cara al viento o aumente la altura de la llama.	Fogonazo.
Fogonazo.	Nivel de gas del tanque de propano bajo.	Sustituya el tanque.	La grasa provoca un fuego persistente.
La grasa provoca un fuego persistente.	Formaciones de grasa.	Limpie la cocinilla.	Centelleos (hay fuego en el (los) tubo(s) del quemador).
Centelleos (hay fuego en el (los) tubo(s) del quemador).	Grasa atascada por la acumulación de comida alrededor del sistema de quemadores.	Limpie el quemador y/o los tubos del quemador.	Centelleos (hay fuego en el (los) tubo(s) del quemador).

Garantia limitada

Logotilla de Campamento a gas propano líquido para exteriores,

A ADVERTENCIA: NO intente limpiar esta cocciilla de campamento a menos que las llamas estén COMPLETAMENTE apagadas y la unidad esté fría al tacto.

3. Enjuague las superficies con agua limpia.
nylon.

6. Remueva de la superficie del quemador todo residuo de comida o suciedad.
7. Limpie cuidadosamente todo que encuentre tapado con un alambre rígido, tal como un sujetapapeles abierto.

9. Vuelve a instalar el quemador. Vuelve a conectar el encendedor y coloque nuevamente el resguardo contra el viento y el regulador.

10. Vuelve a colocar la rejilla del quemador.

[Iniciar sesión](#) | [Ayuda](#) | [Aviso legal](#) | [Política de privacidad](#)

Para beneficiar del servicio de garantía más rápidamente, silvase registrar su unidad en www.bluerhino.com o llamarando al 1.800.762.1142.

Limpieza y cuidado

1. Encienda el (los) quemador(es) siguiendo las instrucciones de encendido.
2. Use guantes de protección para colocar cazuelas o ollas en la parrilla de cocción.
3. Use guantes de protección y tenacillas de mangos largos para colocar los alimentos en las cazuelas o en las ollas sobre los quemadores encendidos.
4. Ajuste los controles a la temperatura deseada.
5. Haga la cocción de los alimentos hasta que la temperatura interna del alimento se haya alcanzado.
6. Apague la cocción de campamento girando la parrilla de control a la posición "Off" (apagado). Remueva el tanque de gas propano y guarde lo en un lugar apropiado.

Goccioni

1. Verifique que todos los empadues, etiuguetas y envolturas de protección han sido removidos de la coccinilla.
2. Remueva todo aceite de fabricación que encuentre en la unidad antes de usar la coccinilla por primera vez, encendiendo la coccinilla por lo menos por 5 minutos en la graduación "On" (encendido). Esto realizará una "limpieza por calor" en las piezas internas de la unidad.

uso por primera vez

1. Gire la perilla de control a la posición "Off" (apagado).
2. Remueva el tanque de gas propano líquido y guárdelo en un lugar apropiado.

Apagado:

a. Girle la perilla de control en sentido antihorario a la posición “On” (encendido).

b. Aleje la cerilla o encendedor de butano largo.


5. Si el quemador no se enciende en 5 segundos, gire la perilla de control del quemador a “Off” (apagado), espere 5 minutos y repita el procedimiento de encendido.

6. Despues de encender el quemador observe su llama y asegurese de que todos los orificios estén encendidos y que la altura de la llama corresponda a la del diagrama.

■ PRECAUCIÓN: Si la llama del quemador se apaga durante el funcionamiento, cierre el gas (“Off”) inmediatamente y espere que la zona que rodea despegada de gases antes de volver a encenderlo.

[enquiry@pacificweb.com](#)

3. Verifique que no han quedado fugas de gas.

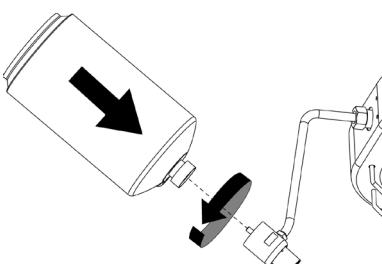

zhangji

1. Asegúrese de que el regulador y la válvula de control estén a la posición “OFF” (apagado con cierre pleno), vea la Figura 1.
2. Lubrique la rosca de la válvula del regulador con



סוכנויות ראייה נס

ESTA DOCUMENTACIÓN DEBE SER CONSERVADA PARA OPERAR CON EL
TANQUE DE PROPAÑO DE UNA LIBRA (450 g) (cilindro DOT
39), DE 7-3/8 PLUGADAS (19 CM) DE ALTAURA, DESECHABLE,
DE 14,1 OZAS. NO UTILIZAR TANQUES DE PROPAÑO DE
UNA LIBRA (14,1 ONZAS)!

Introductions de opérations


ANSWER

Издано в рамках проекта Фонда поддержки социальных инициатив «Сообщество»

nd

3

Fije el regulador

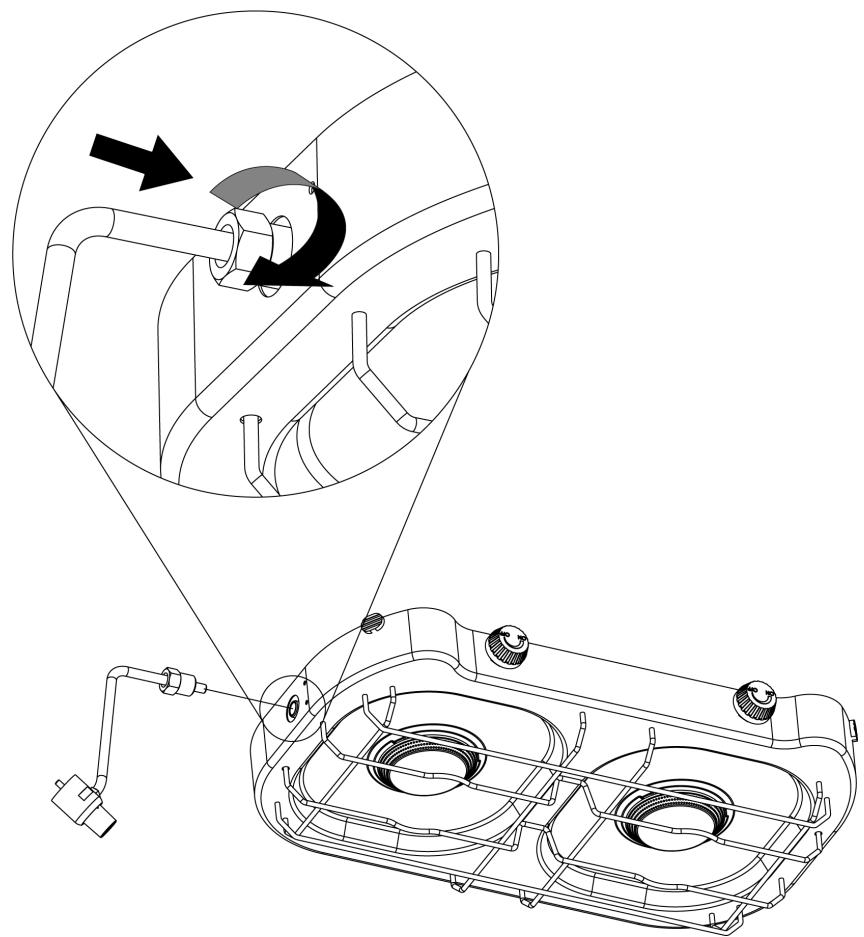

Almacenamiento del regulador cuando no se use

4

COMPRA.

Si necesita ayuda llame, sin cargo, al 1.800.762.1142. Por favor tenga a mano su manual y el número de serie de la unidad, para referencia.

Para facilitar el armado:

- Evite la pérdida de componentes pedidos o elementos de ferretería, armando el producto en un lugar de piso plano sin desperdicios ni residuos.
- Despegue un área suficientemente grande para disponer todos los componentes y los elementos de ferretería.
- Cuando sea del caso, apriete a mano, en un principio, las conexiones de ferretería. Una vez que ha terminado el paso, apriete completamente todos los elementos de ferretería.
- Si gira todos los pasos en el orden indicado para armar debidamente esta unidad.


Para terminar el armado de la unidad necesitará:

- (1) solución para detección de fugas. Las instrucciones sobre cómo preparar esta solución se encuentran en la sección "Instrucciones de operación".
- (1) tanque de propano de 14,1 onzas (1 libra o 450 g)
- Nota: Es importante que siga en forma apropiada todos los pasos de armado de la cocinilla.

Tiempo de armado estimado: 5 minutos.

2

Fije la Parrilla de Coccción

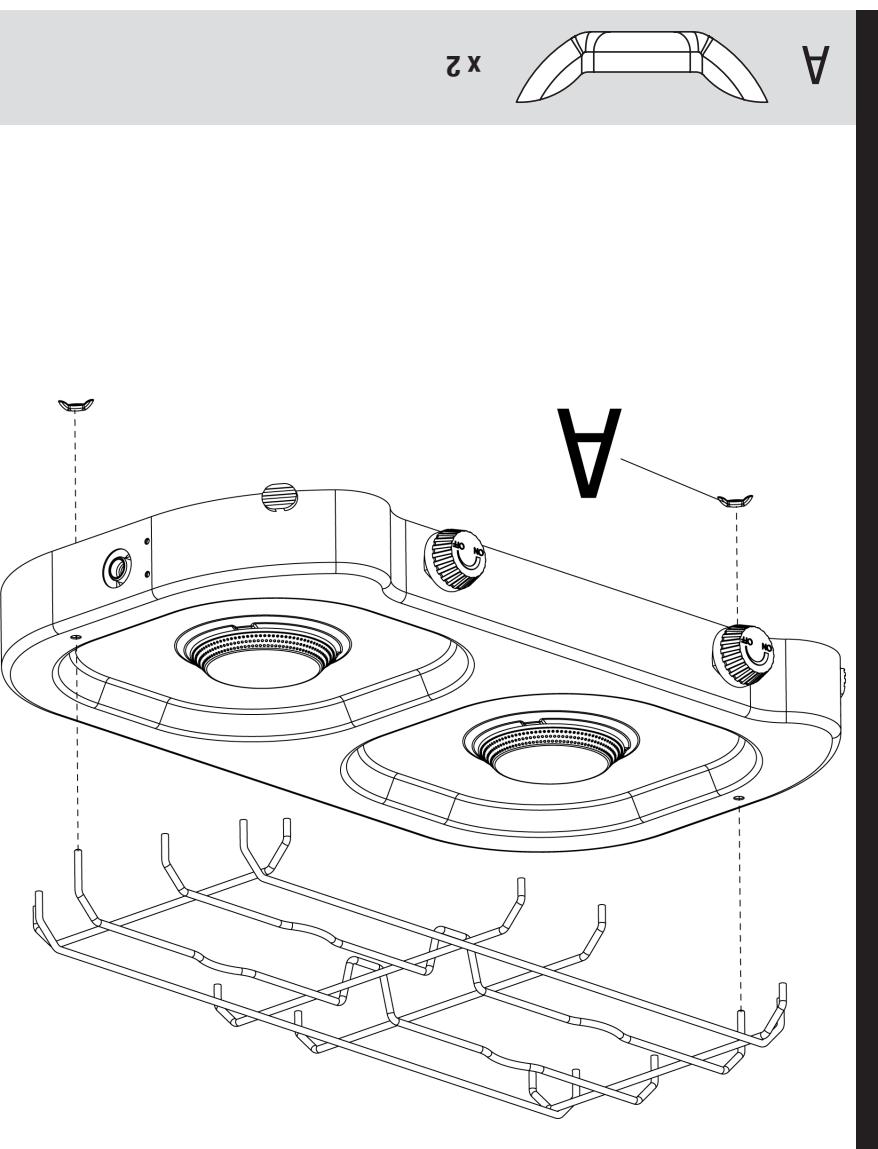

A x 2

Instrucciones de armado

Modelo no. GCT803W

Cocinilla de campingto a gas propano líquido para exteriores,

Acero, M5

2 pzs

Tuerca de mariposa

Elementos de ferretería

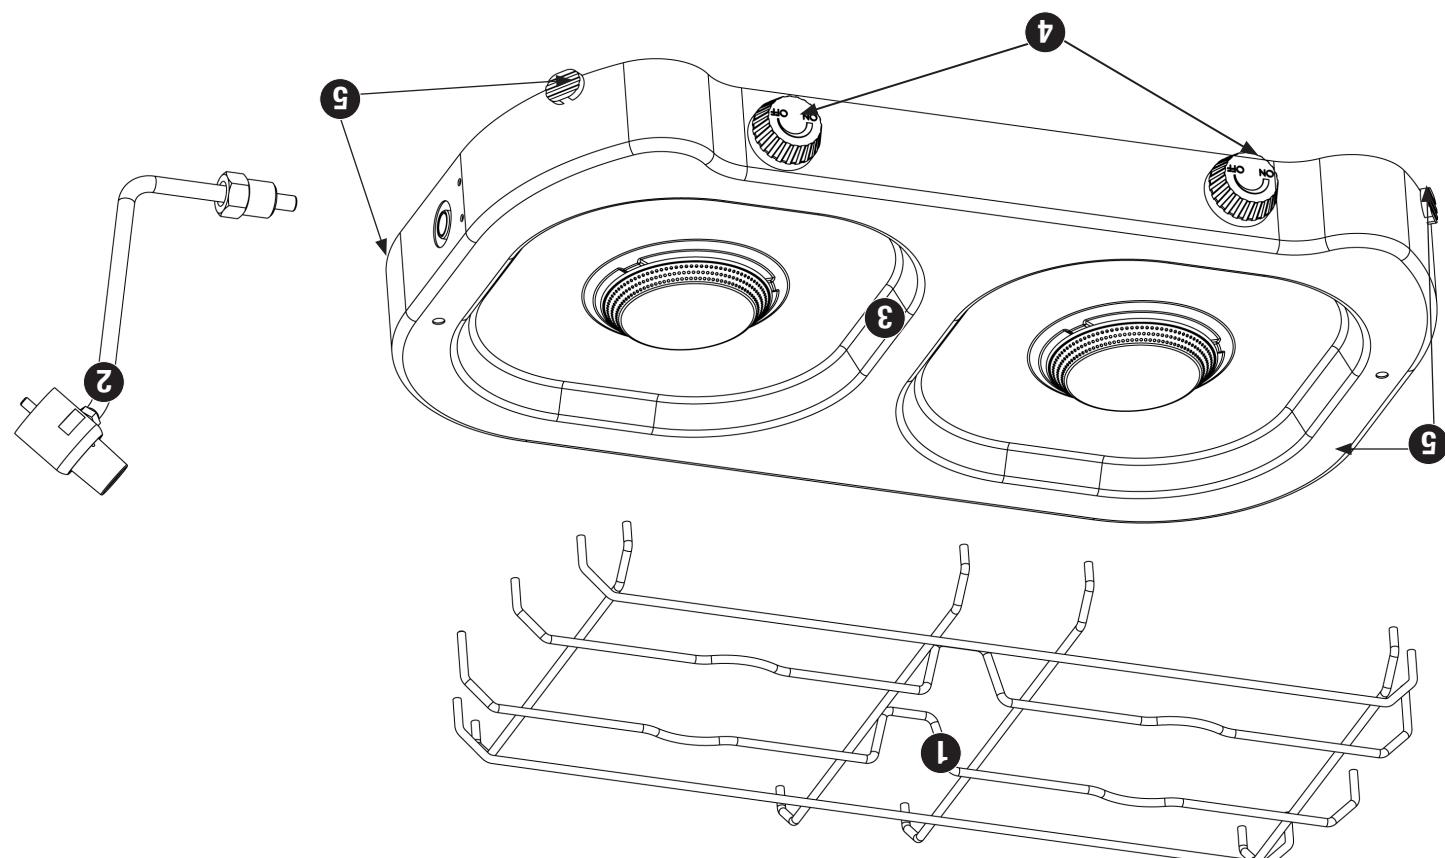


Diagrama de explosión

Lista de piezas

*Viene ensamblado

55-09-213

(5)

Pie (4)

(4)

55-09-211

(3)

Perilla de control (2)*

(2)

55-09-209

(1)

Carcasa de la cocinilla

(1)

55-09-214

(2)

Regulador

(1)

55-09-212

(1)

Parrilla de cocción

(1)

Si necesita ayuda llame al 1.800.762.1142. No venga al lugar de compra.

■ Mantenga todo material y supertiés combustibles a por lo menos 53 cm (21 pulgadas) de la coccinilla en todo momento. No use esta coccinilla debidamente protegidas.

■ Es fundamento mantener limpío el compartimiento de la válvula de la coccinilla, los quemadores y los conductos de aire circulante. Inspeccione coccinilla, los quemadores y los conductos de aire circulante. No utilice la coccinilla de ninguna forma.

■ Utilice únicamente el regulador incluido. El regulador de repuesto será regular.

■ Use únicamente piezas autorizadas de fabrica de Blue Rhino Global peligroso. Si uso de cualquier pieza no autorizada de fabrica puede ser que se encienda esta unidad sin haber leído las instrucciones de operación.

■ Sourcings, Inc. El uso de cualquier pieza no autorizada de fabrica puede ser que se encienda esta unidad en este manual.

■ No toque las piezas de metal de la coccinilla hasta que no se haya enfriado completamente (alrededor de 45 minutos) para evitar quemaduras, a menos que usted tenga puestos elementos de protección tales como guantes o almohadilla para las ollas, guantes de barbacoa, etc.

■ Cuanado este coccinilla, tenga facilmente accesibles los elementos para quitar o instalar o utilizar en embarracaciones o vehículos de recreo.

■ No utilice la coccinilla si hace mucho viento.

■ Nunca se apoye sobre la coccinilla cuando la está encendiendo.

■ No use esta coccinilla si alguna de sus partes se ha sumergido en agua.

■ Llame inmediatamente a un técnico de servicio certificado para que inspeccione el producto y para que la sustancia de fregar se incendie de control o coccinilla en la coccinilla en agua.

■ NO deje una coccinilla encendida sin vigilancia, especialmente en sistema los niños y las mascotas lejos de gas que se haya sumergido en agua.

■ NO intente mover la coccinilla mientras esté encendida. Deje que la coccinilla se enfríe antes de moverla o guardara.

■ NO coloque siempre la coccinilla sobre el suelo de terrazas de madera o césped.

■ NO use la coccinilla para cocinar dentro o exterior el ambiente. Los gases tóxicos pueden acumularse y provocar la asfixia.

■ Despues de un periodo de almacenamiento o de falta de uso de la unidad, verifique que no haya fugas u obstrucciones en el quemador e inspeccione la manejabilidad del área de cocción con papel de aluminio.

■ Nunca cubra la totalidad del área de cocción con papel de aluminio.

■ Por favor, use guantes de protección cuando este armando este producto.

■ NO trate de forzar las piezas juntas pues esto puede ocasionar lesiones o daños a la propiedad, lesiones serias y hasta fatales.

■ No utilizar el equipo en una atmósfera explosiva. Mantenga la zona de la coccinilla libre de materiales combustibles, gasesolina y cualquier otro vapor o líquido inflamable.

■ No utilizar el servicio de atención al cliente, a un técnico o a su proveedor de nuestro servicio para una fuga, desconecte el tanque de propano. Lame a no puede parar las fugas hayan sido preparadas. Si

■ No use la coccinilla hasta que todas las fugas hayan sido compradas. Si hay fugas.

■ No use cerillas o fósforos, encendedores o una llama para comprobar si d. No tiene. No use o permite fugas en exteriores donde hay una buena ventilación.

■ Siempre compruebe si hay fugas en exteriores donde hay una buena si hay fugas.

■ No tiene. No use o permite fugas en el área al comprender b. No tiene. No use o permite fugas en el área de ignición en el área al comprender vez que el tanque de gas está conectado.

■ Compruebe siempre si hay fugas si encender la coccinilla, cada de explosión que no hay fugas de gas. Para evitar cualquier riesgo de fugas provocar un fuego o una explosión.

■ Antes de operar esta unidad, debe observar todos los procedimientos para provocar la unidad si hay una fuga de gas. Las fugas de gas pueden persona.

■ Verifique que no haya fugas aún si el aparato ha sido armado por otra transportista puede affijar algunas de ellas.

■ Pruebe la integridad de todas las conexiones ya que el movimiento en fabrica en cuanto a fugas de gas.

■ Todas las conexiones de gas de su coccinilla han sido verificadas en gasolina, queroseno o alcohol con este aparato.

■ No use carbón de leña, líquido para encender, piedras volcánicas, forma segura esta aparato.

■ El uso de bebidas alcohólicas, medicamentos o drogas de farmacia puede afectar la habilidad del usuario para armar debidamente u operar en campamento, de una casa móvil o de su propia casa.

■ No intente nunca acoplar esta coccinilla al sistema de propano de un el que la temperatura supera los 125°F (51,5°C).

■ Los tanques de propano deben almacenarse en exteriores, en un lugar al aire libre siempre fuera del alcance de los niños y nunca en un garaje, difícil o espacio cerrado. Nunca almaceñe tanques de gas en un lugar en el que la temperatura supera 125°F (51,5°C).

■ Los tanques de gas propiano líquido ni la manejé bruscamente. No desechar el tanque de gas propano líquido ni la manejé bruscamente. Utilizarlos.

■ Los tanques de propano líquido abollados o oxidados pueden ser peligrosos y deberían ser revisados por su proveedor de gas PL antes de extracción de vapores.

■ Verifique que el tanque de propano esta colocada para facilitar la extracción de vapores.

■ Comercializa según las Especificaciones para tanques de gas PL del Departamento de Transporte (DOT) de EE.UU. o del Estándar nacinal de Canadá, CAN/CSA-B339.

■ El tanque de gas propano líquido (PL) debe estar fabricado y unicammente tanques marcados "Propano" pueden usarse en esta unidad. Se requiere un tanque de gas propano para hacer funcionar este aparato. debe almacenar cerca de este o cualquier otro aparato.

■ Un tanque de propano líquido que no esté conectado para su uso no se (3,05 m) de esta unidad.

■ Nunca guarde un tanque adicional de propano debajo a menos de 10 pies (3,05 m) de esta unidad.

■ El contacto directo con el propano líquido puede causar quemaduras graves en la piel.

■ En su estado natural, el propano no tiene ningún olor. Para su seguridad, se añade una esencia odorífera que huele a col podrida.

■ El propano es un gas explosivo bajo presión, más denso que el aire y se asienta en pozos en zonas bajas.

■ El propano es un gas explosivo bajo presión, más denso que el aire y se inadecuadamente. Antes de utilizar cualquier producto que emplee propano líquido, estudie detenidamente sus características.

■ El propano es inflamable y resulta peligroso si se manipula inadecuadamente.

■ Características del propano líquido (PL):

■ El convertir o tratar de convertir esta coccinilla de gas propano líquido para ser usada con gas natural es peligroso e invalida la garantía de la unidad.

■ Esta coccinilla utiliza unicamiente gas de propano líquido (PL) como combustible.

■ Esta coccinilla es para ser usada al aire libre unicamiente y no debe usarse para edificios estructuras o edificaciones.

■ Esta coccinilla de camping NO ha sido diseñada para uso comercial. en un edificio, garaje o cualquier otra área cerrada.

■ Esta coccinilla es para ser usada al aire libre unicamiente y no debe usarse en un edificio, garaje o cualquier otra área cerrada.

ADVERTENCIAS

• PELÍCULA: El no segundos de avisos de peligro, las advertencias y las precauciones de este manual, plantea ocasionalmente incendio o una explosión, con sus consecuentes daños a la propiedad, lesiones personales y hasta accidentes fatales.

PARA SU SEGURIDAD
ADEVERIENCIA

No guarde o use gasolina u otros líquidos o vapores inflamables cerca de esta unidad o de cualquier otro aparato.



Si huele a gas -

1. No intente encender el aparato.
2. Apague cuadúier llama activa.
3. Desconecte el aparato del suministro de combustible.



© 2008 Blue Rhino Global Sourcing, Inc. Todos los derechos reservados.

1.800.762.1142, www.bluerhino.com

Winstons-Salem, NC 27104 EE.UU.

Blue Rhino Global Sourcing, Inc

Fabricado en China para:



Gas Natural.	6
Combustibles, ANSI Z223.1/NFPA 54, CAN/CGA-B149.1, Código Nacional para Gas Y Si no existen códigos locales, use las normas siguientes: Código Nacional para Gas Y	6
El uso e instalación de este producto ha de realizarse de acuerdo con los códigos locales.	7
Resolución de problemas	7
Garantía limitada	6
Registro del producto	5
Limpieza y cuidado	5
Cocción	5
Usos por primera vez	5
Apagado	5
Encendido	5
Comprobación si hay fugas	5
Conectar el tanque de gas	5
Instrucciones de operación	5
Instrucciones de armado	4
Diagrama de explosión y elementos de ferretería	3
Salvaguardias importantes	2
Página 2	

Índice**ADVERTENCIA****ADVERTENCIA****PELIGRO****PELIGRO DE MONOXIDO DE CARBONO**

- Nunca use esta unidad en un espacio cerrado tal como en un garaje, una tienda, un automóvil o en la casa.
- El usarla en un espacio cerrado puede ser mortal.
- Esta unidad produce monóxido de carbono el cual es inodoro.




Conserve estas instrucciones para futuras consultas.
Si está montando esta unidad para otra persona,
entregüele este manual para futuras consultas.

3. El no seguir estas instrucciones puede causar un incendio o una explosión, con sus consecuentes daños a la propiedad, lesiones personales y hasta accidentes fatales.

2. Lea atentamente las instrucciones preparadas para instalar, tunear, ajuste, alteración, mantenimiento del equipo antes de instalarlo, ponerlo en marcha o darle servicio.

1. Una instalación, ajuste, alteración, reparación o mantenimiento inadecuados pueden causar lesiones o daños a la propiedad.

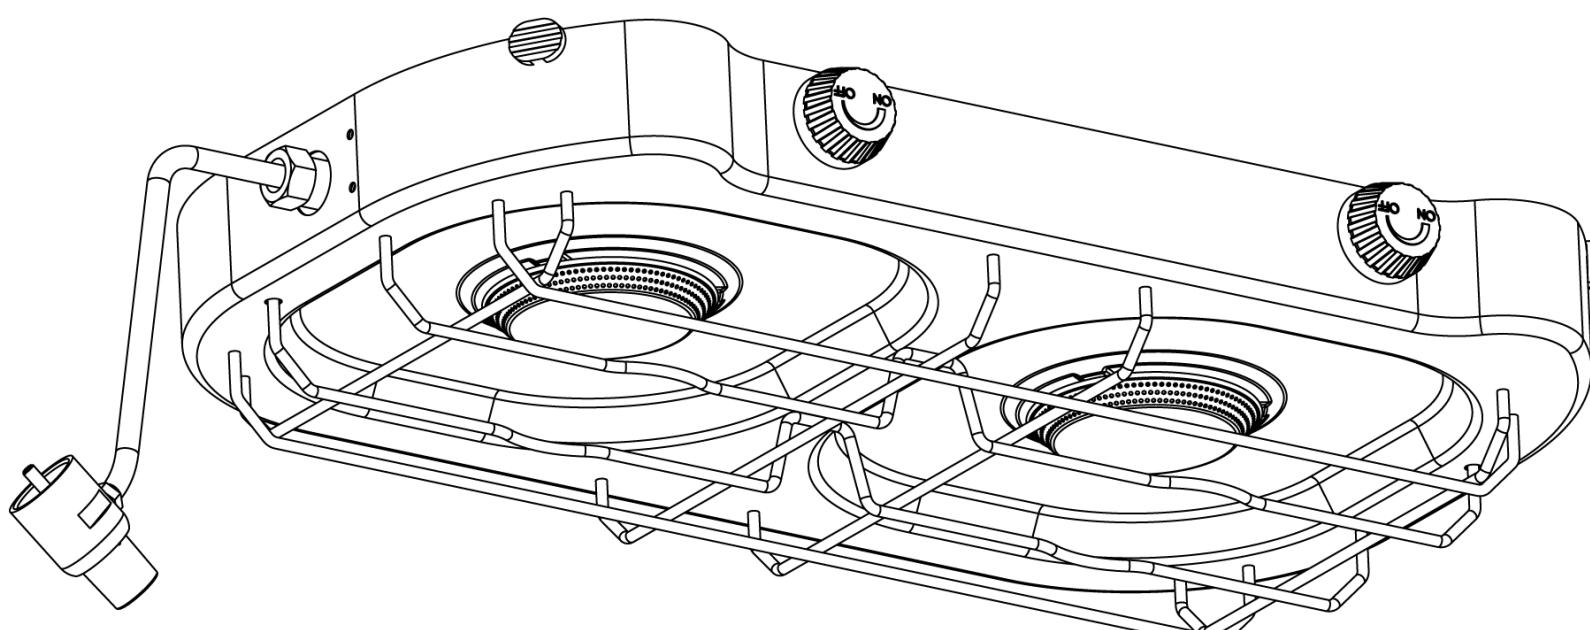PARA SU SEGURIDAD:**PARA SU SEGURIDAD:****PELIGRO**

Modelo no. GCT803W

Gogiilla de camping a gas propano
Líquido para exteriores

MANUAL DEL USUARIO